
# MIDI-IF for SX-150mk2

**Owner's Manual** 



## Connection

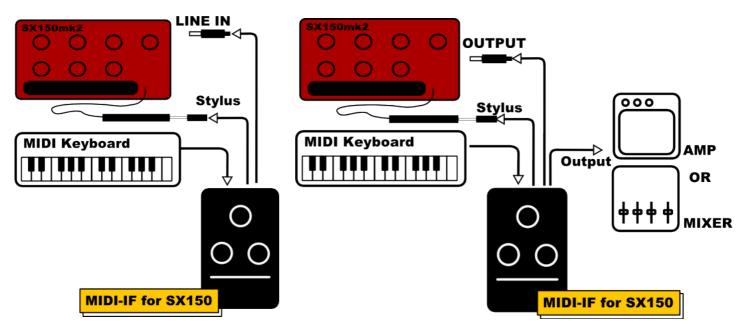

Type 1 : getting sound from SX-150mk2

Standard connection is Type 1. You can get SX-150mk2's sound from SX-150mk's small speaker. Enjoy its sound anywhere you want. When you want Type 2:getting sound from output

to get more loud or use SX-150 in your recording session, Type 2 is recommended.

#### MIDI-IN

put MIDI out here. MIDI-channel can be accepted only 1.

#### Mini plug for SX150

Put it "Line In" in or output of SX150. When you want to get sound from small speaker of SX150 mk2 then connect it to "Line In". Or you need more loud sound, plug it to SX-150's "output". the signal may appear on standard jack at the MIDI-IF. you can use standard cable for guitar or something. put it to Guitar amp or so.

### Stylus jack

Put it the stylus of SX-150mk2 to drive it.

### OUT(jack)

This jack is just only connected to 3.5mm plug. you can just use it as plug size conveterter from 3.5mm (mini plug) to 6.2mm (standard plug).

#### **Power Switch**

Power switch.

## Maintenance

When battery low, Open box and change it. It's 006p connect (9V Type). Check + / – sleeve. Beware not to

#### Glide

You can get glide effect on pitch.

#### Rate

You can get the vibrate by moving modulation wheel at your MIDI key board (#CC 1).

it change the depth of vibrate. This knob change its depth.

#### Tune

For Setting the tune of SX-150mk2

#### Wave shape

Change the wave form of the vibrate. Triangle / Squre wave can be selected.

#### **Tune Switch**

This is pitch tuning support function. Pushing this button, you can hear center "A" sound (220Hz) from Output jack or mini plug. when you put mini plug into "Line In" of sx-150, you can also hear the sound of sx-150 itself. so turn Tune knob and get the tune right.

connect wrong way.

# MIDI-IF for SX-150mk2

## **Owner's Manual**

Apl-08, 2015 Fisrt edition Copyright beatnic.jp 2015

